

Remote controller usage

1. How to match code between projector lift and the remote?

Briefly press the "Learn" button on the receiver (located on the projector lift) for 1 second. The red light on the receiver will begin to flash slowly for 10 seconds. During this time, press the 'up' button on the remote. If the blue light on the receiver flashes quickly three times, the code matching is successful.

2. How to delete code and rematch code?

Press the 'stop' button on the remote for 5 seconds. When the red light on the receiver flashes slowly for 10 seconds, press the button on the back of the remote within this time. The blue light on the receiver will flash quickly three times, indicating that the single code has been successfully deleted. To rematch the code, repeat step 1.


3. 485 control (use 6P6-core telephone cable registered jack to connect), according to the figure below: A is +, B is - The function of the 2 ports are same.

Send commands:


3.1 Send (Learn) command:	9a	01	01	00	0a	AA	A0
	[Befor sending comand, press 'Learn' of the box]						
3.2 Send (Down) command:	9a	01	01	00	0a	EE	E4
3.3 Send (UP) command:	9a	01	01	00	0a	DD	D7
3.4 Send (Stop) command:	9a	01	01	00	0a	CC	C6
3.5 Send (Delete code) command:	9a	01	01	00	0a	A6	AC

4. How to Adjust the Working Stroke of the Projector Lift?

The working stroke of the projector lift is preset at the factory and should not be adjusted without permission. If adjustments are necessary, please contact our technical staff for guidance.

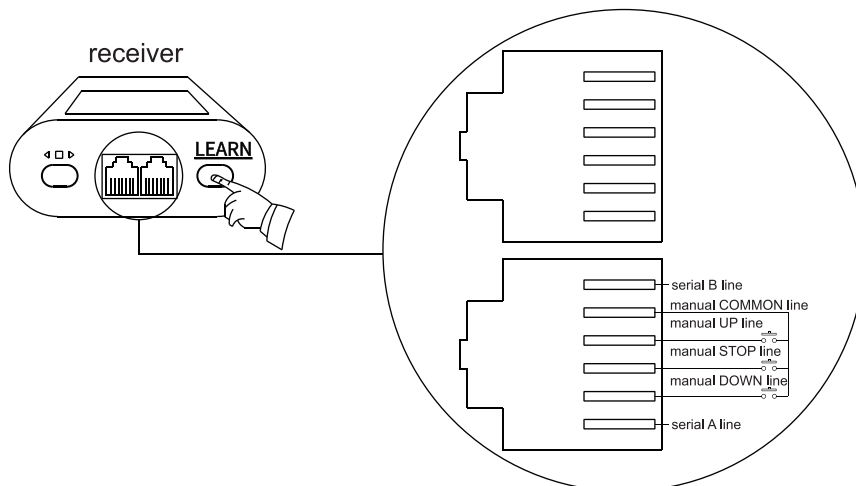

Phantom Lift Mini

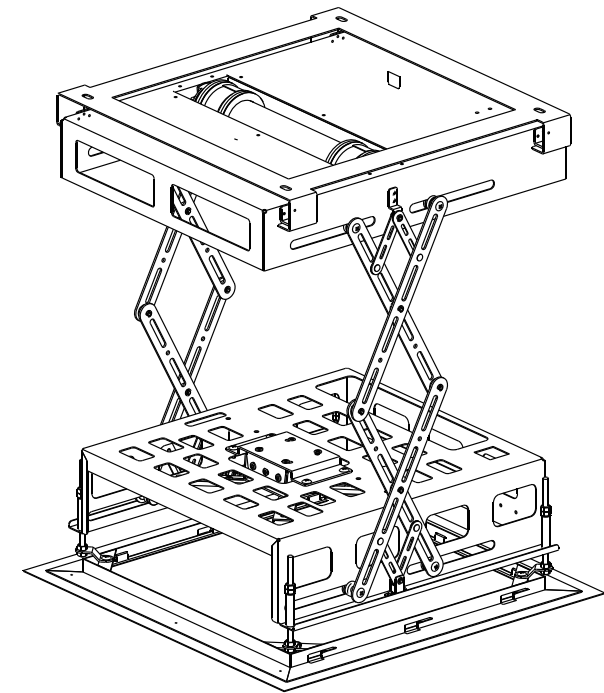


Instruction manual for Phantom Lift Mini

Please read this manual before installing and using the projection lift. Retain this manual for future reference.




Installation (continue)


6. 1. Install the projector into the projector lift, then fasten it with hexagonal screws.
2. Rotate the extending board to align the 600x600 ceiling bottom board with the ceiling grid perfectly.
3. Use a hexagonal screwdriver to fasten the M3x10 cross flat-head screws.

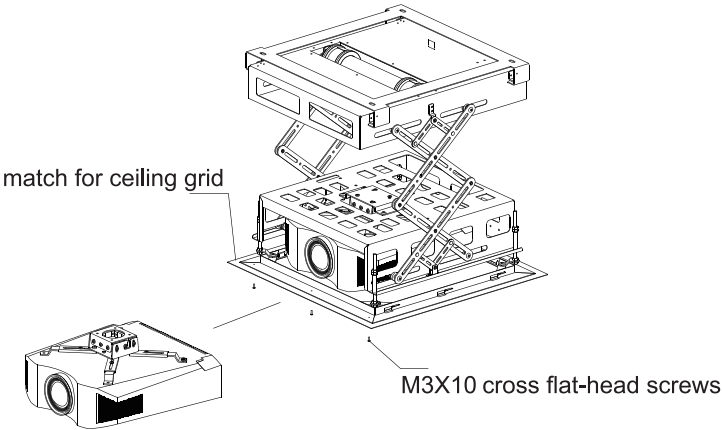

6. 4. Adjust the tilt angle according to the actual projection needs.

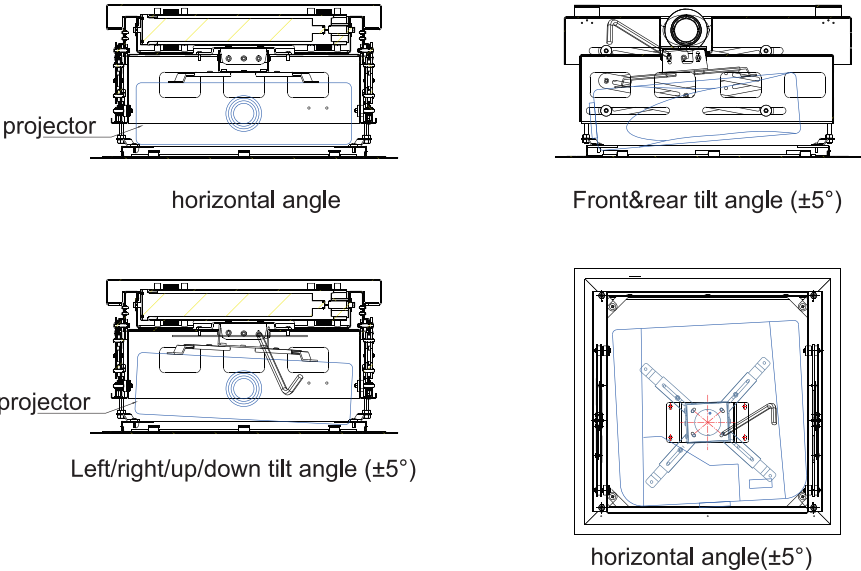


What's included

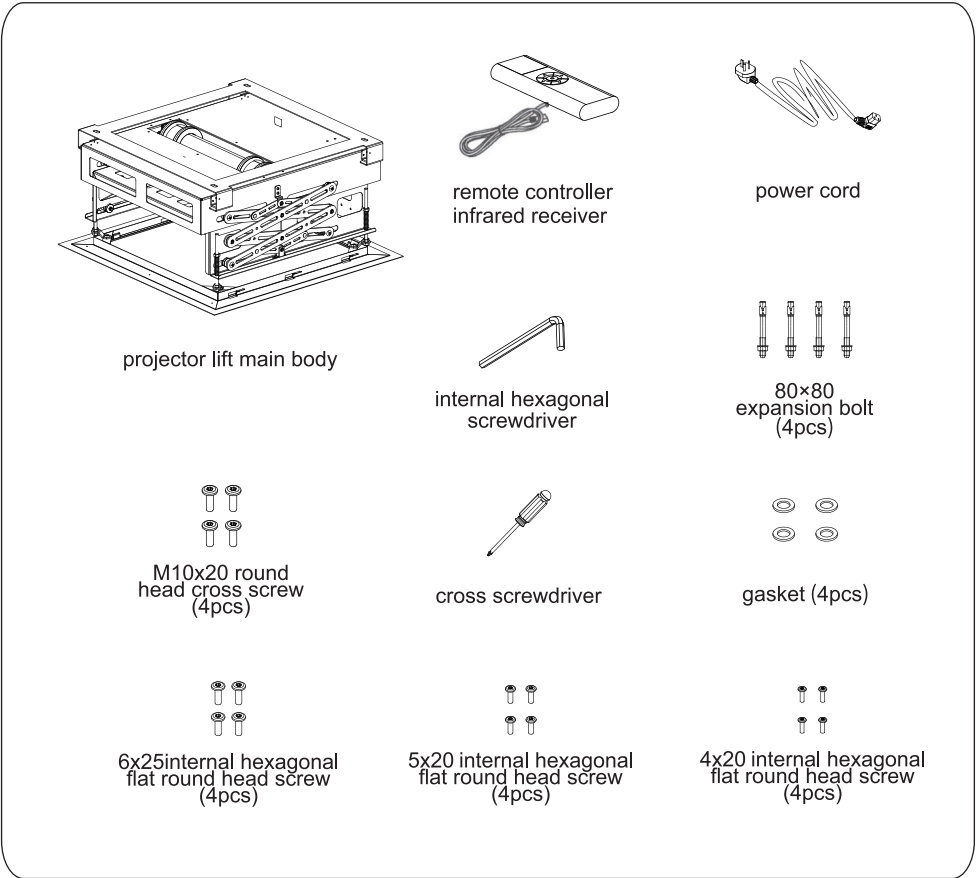


Installation


1. Drill holes in the designated spots and install the top board on the ceiling.

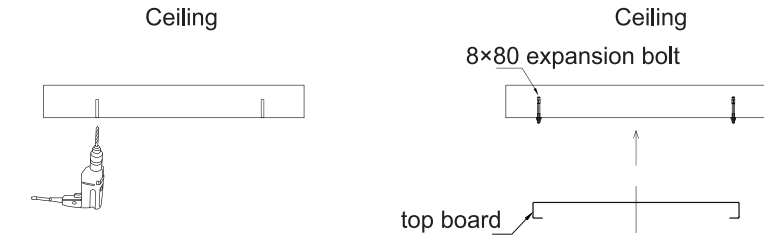


2. Install the projector lift main body on the top board using M10x20 cross flat head screws to secure it.

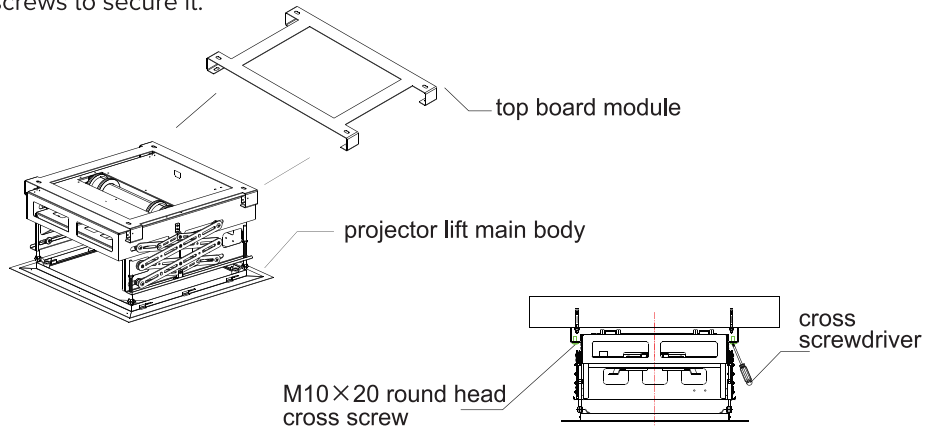


3. Connect to power and adjust the electric projector lift to the desired position. Use a hexagonal screwdriver to loosen the screws and remove the projector bracket.

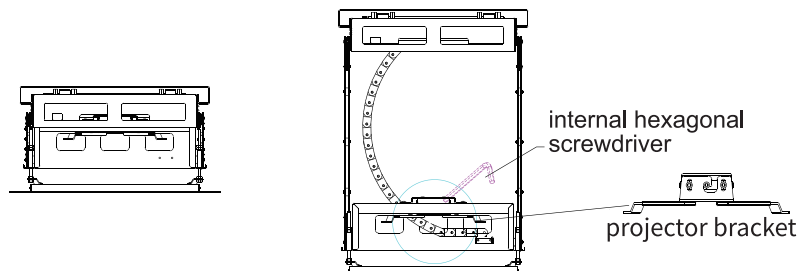

4. Use the internal hexagonal screwdriver to remove the 600x600 ceiling bottom board.

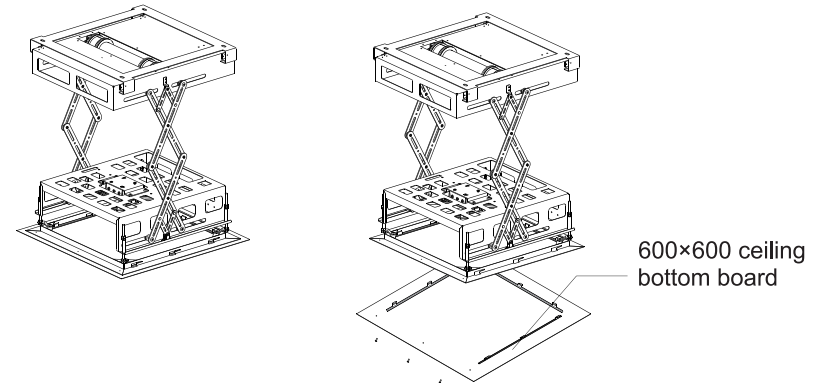

5. Install projector bracket

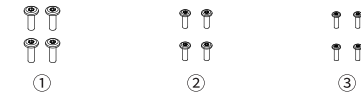

- ① 6x25 internal hexagonal flat round head screw (4pcs)
- ② 5x20 internal hexagonal flat round head screw (4pcs)
- ③ 4x20 internal hexagonal flat round head screw (4pcs)

