


Pro Connect 977

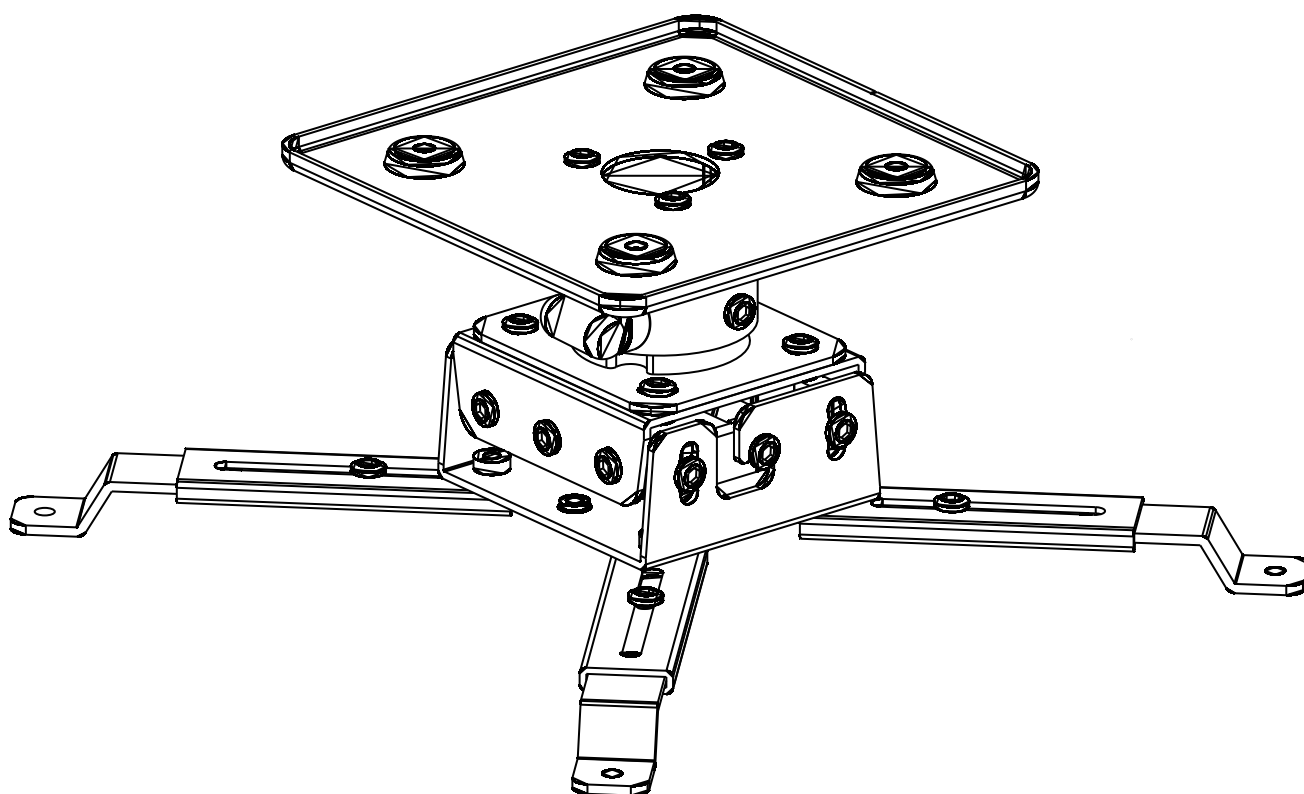

Instruction manual for Pro Connect 977

Please read this manual before installing and using the projector mount. Retain this manual for future reference.



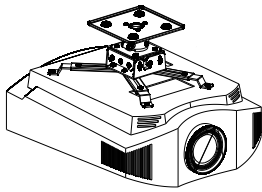


Figure 1-1

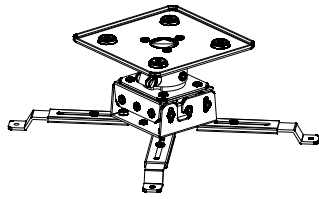

Main View

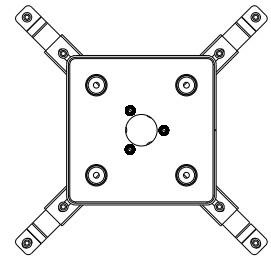

Top View

Parameter

Max Load : 25Kg

Type	Length L (mm)		Width W (mm)		Height H (mm)		Tube stretch length LA (mm)
	Min	Max	Min	Max	Min	Max	
Short Pole	226	319	223	316	112	130	18

left/right adjustable angle	$\pm 3^{\circ}$
tilt adjustable angle	$\pm 15^{\circ}$
up/down adjustable angle	$\pm 5^{\circ}$

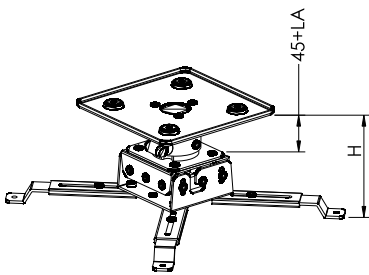


Figure1-2

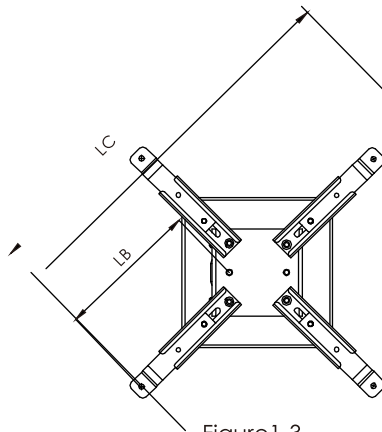
 
 
 


Figure1-3

Installation hole distance		
	Min	MAX
3 holes LB (mm)	115	180
4 holes LC (mm)	315	449

Accessories

 Mounting Board	 Tube	 Mounting feet	 Allen Key  Gloves	 Inner-Hexagon Screws*5  Expanded colloidal particles*4  M5x15 screws*4  M4x20 screws*4  Automatic bolts*4
---	---	--	--	---

Installation

1

Remove the mounting board and tube, then unscrew the three bolts from the tube. Align the holes of the tube and mounting board (pay attention to the direction), and screw the bolts into the holes. Refer to Figure 1-4.

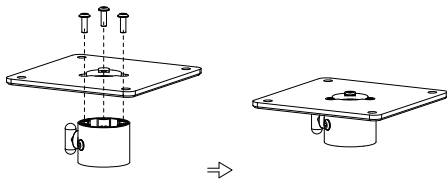


Figure1-4

2

Remove the mounting feet as shown in Figure 1-5. Separate components 1 and 2 along the guide chute, as illustrated in Figure 1-6.

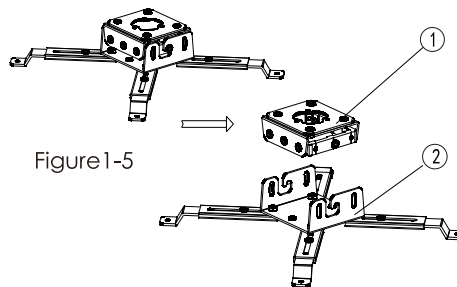


Figure1-6

3

Align the hole of component 2 with the part shown in Figure 1-4, then screw in the bolts. Refer to Figure 1-7.

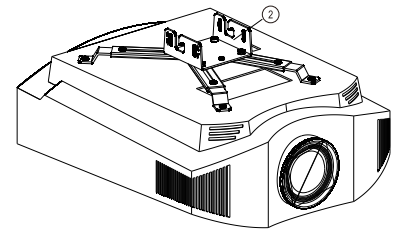


Figure1-7

Ceiling mount

4.1

Align assembly 1 with the assembly shown in Figure 1-4, and screw in the bolt. Refer to Figure 1-8.

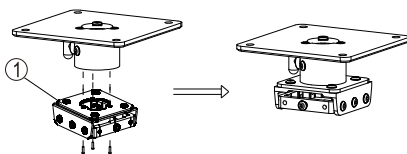


Figure1-8

4.1

Identify the mounting position on the ceiling, then place stickers on the drill holes. Use a drill to create four 10mm holes, insert the expansion anchors, and attach the mounting board to the ceiling. Refer to Figure 1-9.

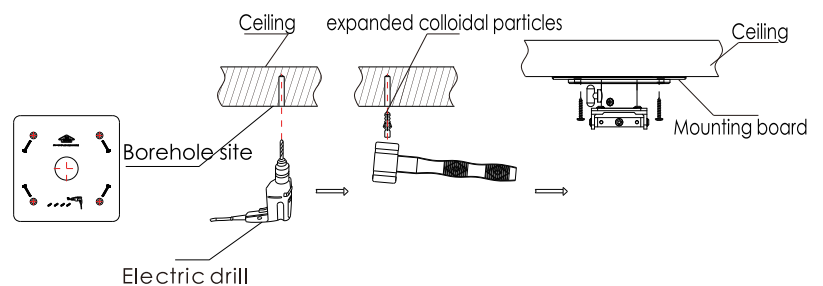


Figure1-9

4.3

Thread the projector cable through the inner tube, then insert the inner tube into the outer tube mounted on the ceiling. Lift the mounting feet with both hands (completing the projector installation), hang them on the axial screws in the guide chute, and lock the four adjusting screws on the left and right. Refer to Figure 1-10

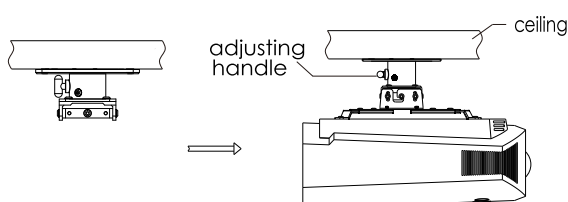


Figure1-10

4.4

Height Adjustment: Loosen the screw of the adjusting handle, adjust the height, and then tighten the screw.
Tilt Angle Adjustment: Use an Allen key to loosen the bolts on both sides, rotate the mounting feet to adjust the tilt angle, tighten 1-2 bolts to set the angle, and then tighten the remaining bolts after confirming the angle. Refer to Figure 1-11.

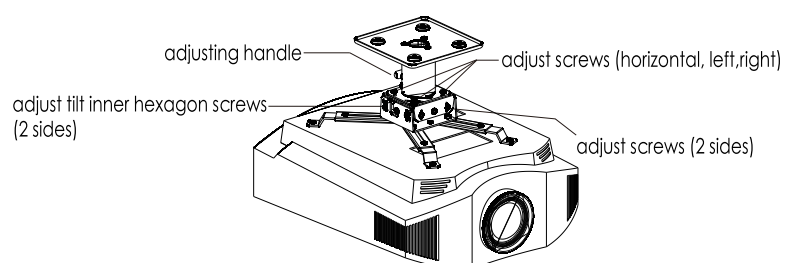


Figure1-11

If you need to use the long tube, please follow these steps:

1

Remove the mounting board and tube, then unscrew the three bolts from the tube. Align the hole positions of the tube and mounting board (pay attention to the direction), and screw the bolts into the holes. Refer to Figure 2-4.

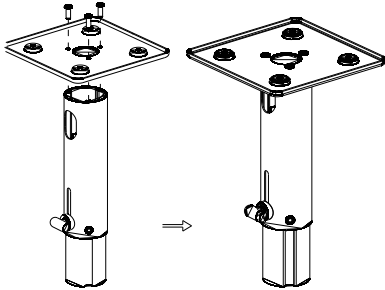


Figure 2-4

2

Remove the mounting feet as shown in Figure 2-5. Separate components 1 and 2 along the guide chute, as illustrated in Figure 2-6.

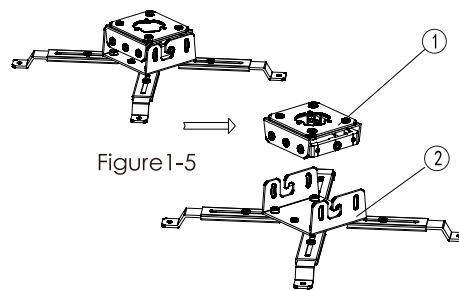


Figure 2-6

3

Align the hole of component 2 with the part shown in Figure 2-4, then screw in the bolts. Refer to Figure 2-7.

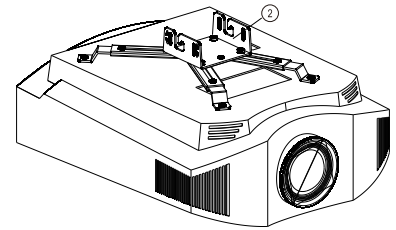


Figure 2-7

Ceiling mount

4.1

Align assembly 1 with the assembly shown in Figure 1-4, and screw in the bolt. Refer to Figure 2-8.

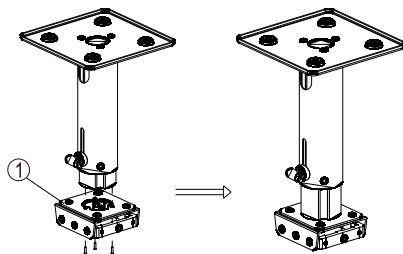


Figure 2-8

4.1

Identify the mounting position on the ceiling, then place stickers on the drill holes. Use a drill to create four 10mm holes, insert the expansion anchors, and attach the mounting board to the ceiling. Refer to Figure 2-9.

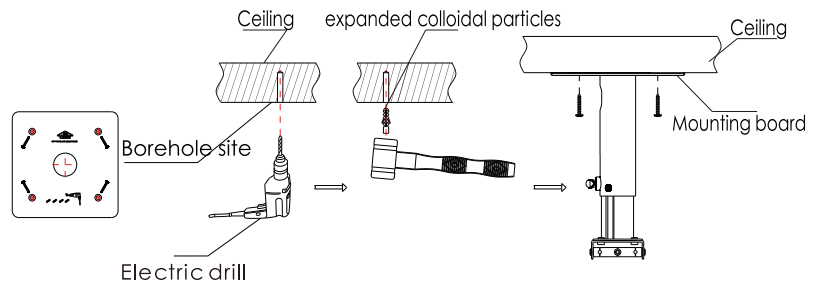


Figure 2-9

4.3

Thread the projector cable through the inner tube, then insert the inner tube into the outer tube mounted on the ceiling. Lift the mounting feet with both hands (completing the projector installation), hang them on the axial screws in the guide chute, and lock the four adjusting screws on the left and right. Refer to Figure 2-10

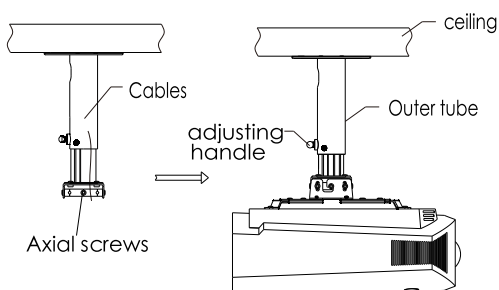


Figure 2-10

4.4

Height Adjustment: Loosen the screw of the adjusting handle, adjust the height, and then tighten the screw.
Tilt Angle Adjustment: Use an Allen key to loosen the bolts on both sides, rotate the mounting feet to adjust the tilt angle, tighten 1-2 bolts to set the angle, and then tighten the remaining bolts after confirming the angle. Refer to Figure 2-11.

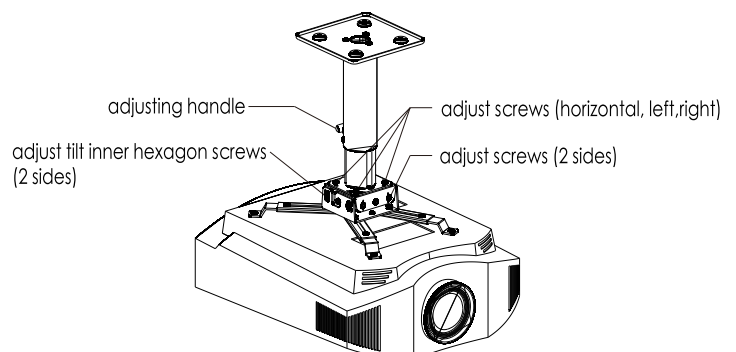


Figure 2-11